



Description


SE2490 is a wide input voltage, high efficiency Active CC step-down DC/DC converter that operates in either CV (Constant Output Voltage) mode or CC (Constant Output Current) mode.

SE2490 consists of step-down switching regulator with PWM control. The device includes a reference voltage source, oscillation circuit, error amplifier and etc.

SE2490 provides low-ripple power, high efficiency, and excellent transient characteristics. The PWM control circuit is able to the duty ratio linearly forms 0 up to 90%. An over current protection function is built outside that it can set by a resistance. An external compensation is easily to system stable; the low ESR output capacitor can be used.

With the addition of an internal N-channel Power MOS, a coil, capacitors, and a diode connected externally, these ICs can function as step-down switching regulators. They serve as ideal power supply units for portable devices when coupled with the PSOP-8 packages, providing such outstanding features as low current consumption. Since this converter can accommodate an input voltage up to 36V.

Typical Application

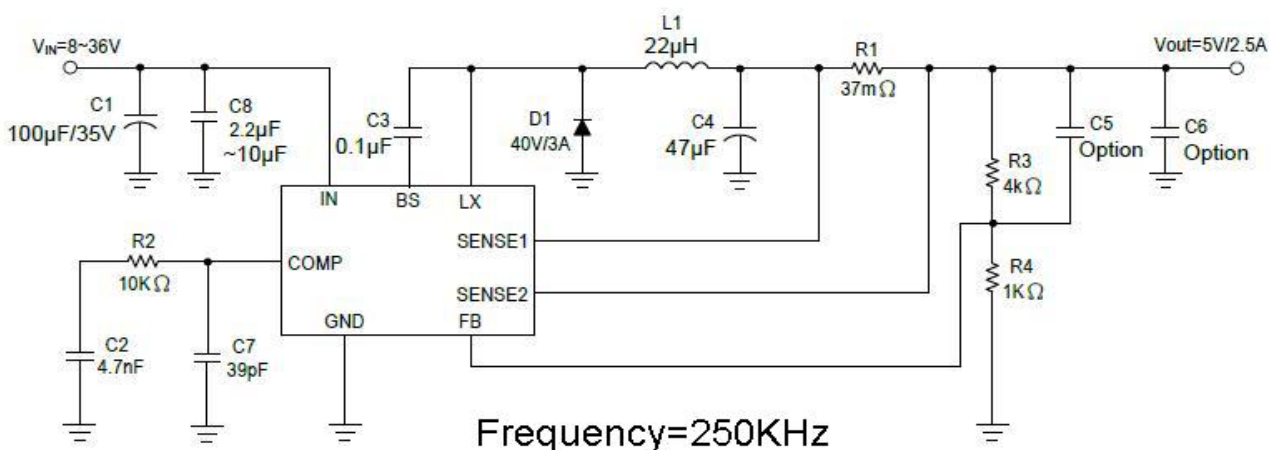

Features


- Input Voltage : 8V to 36V
- Vout Accuracy ($V_{FB}=1V$) $\pm 2\%$
- CC/CV mode(Constant Current and Constant Voltage)
- Up to 2.8A output current
- $\pm 3\%/\pm 5\%/15\%$ Current limit Accuracy
- Duty ratio : 0% to 90% PWM control
- Oscillation frequency : 250KHz
- Thermal Shutdown function.
- Short Circuit Protect (SCP).
- Built-in internal LX N-channel MOS.
- Current mode non-synchronous PWM converter
- External current limit setting.
- Over Voltage Protection 5.8V.
- Built in adjustable line-compensation.
- PSOP-8 Pb-Free package

Application

- Car charger
- Portable charger Device.



Pin Configuration

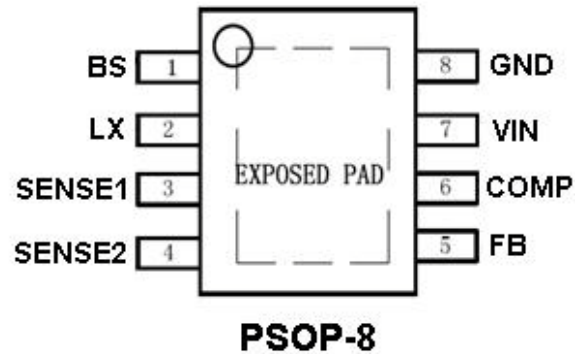

Pin Description


Pin	Pin Function Description	Pin	Pin Function Description
BS	Bootstrap Pin. This provides power to the internal high-side MOSFET gate driver. Connect a 0.1uF capacitor from BS pin to LX pin.	FB	Output voltage feedback control
LX	Power Switching Output to External Inductor.	COMP	Error Amplifier Output. This pin is used to compensate the converter.
SENSE1	Current Sense input1	VIN	Power Supply Input. Bypass this pin with a 0.1uF ceramic capacitor to GND, placed as close to the IC as possible.
SENSE2	Current Sense input2	GND	GND pin.

Ordering Information

Part Number	Marking Information	Package	Remarks
SE2490-LF	SE2490 YYWW-LF	PSOP-8	YYWW means Production batch XX=LF: Lead Free.



Functional Block Diagram

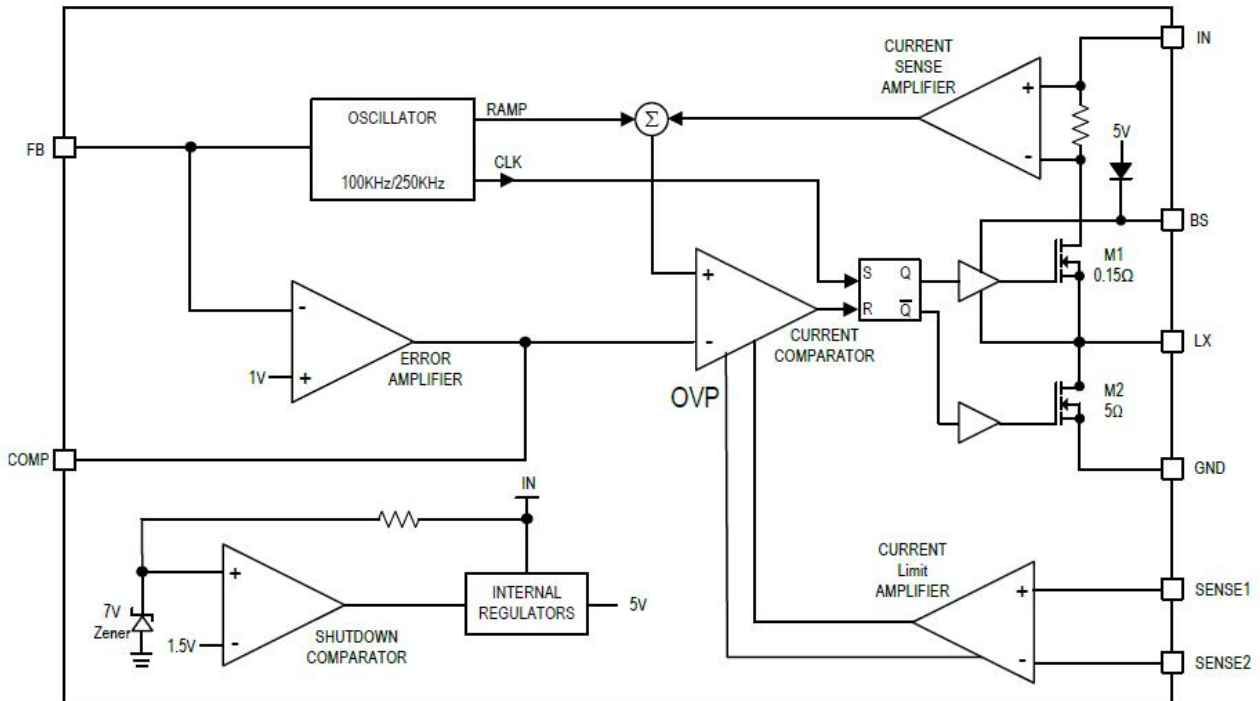

Absolute Maximum Rating

Parameter	Value	Units
Input Supply Voltage	40	V
LX Voltage	-1 to $V_{IN}+1$	V
BS Voltage	$V_{LX}-0.3$ to $V_{LX}+7$	V
$V_{FB}, V_{SENSE1}, V_{SENSE2}, V_{COMP}$	-0.3 to 6	V
Thermal Resistance from Junction to case	15	$^{\circ}\text{C}/\text{W}$
Thermal Resistance from Junction to ambient	40	$^{\circ}\text{C}/\text{W}$

Operating Rating

Parameter	Value	Units
Junction Temperature	-40 $^{\circ}\text{C}$ ~ 150	$^{\circ}\text{C}$
Storage Temperature	-55 $^{\circ}\text{C}$ ~ 150	$^{\circ}\text{C}$
Lead Temperature (Soldering, 10 sec)	300 \pm 5	$^{\circ}\text{C}$



Electrical Characteristics

$V_{IN} = 12V$; $T_J = 25^{\circ}C$; unless otherwise specified.

Symbol	Parameter	Conditions	Min	Typ	Max	Unit
V_{in}	Input Voltage		8	--	36	V
	OVP detect voltage	Internal define	-	5.8	-	V
	OVP Hysteresis		-	0.3		V
I_{CCQ}	Quiescent Current	$V_{FB} = 1.5V$, force driver off	-	2	-	mA
	Standby Supply Current	$V_0 = 5V$, No Load	-	10	15	mA
I_{FB}	Line compensation Current	$V_{SENSE1} - V_{SENSE2} = 100mV$	3.5	5	6.5	μA
V_{FB}	Feedback Voltage		0.98	1	1.02	V
R_{DSON}	High-Side Switch On Resistance	$V_{IN} = 12V$, $I_{OUT} = 1A$	-	150	200	m Ω
R_{DSON}	Low-Side Switch On Resistance	$V_{IN} = 12V$	-	5	-	Ω
F_{OSC}	Switching Frequency	$I_{OUT} = 200mA$	200	250	300	KHz
	Maximum Duty Cycle		87	90	-	%
	Minimum On-Time		-	150	-	ns
	Secondary Cycle-by-Cycle Current Limit	Minimum Duty Cycle, no CC	-	3.5	-	A
V_{SCP}	Reference Voltage of the Short Circuit Fold back Comparator		-	0.4	0.45	V
V_{SENSE}	Sense Voltage(Bin1)	$V_{SENSE1} - V_{SENSE2}$	97	100	103	mV
V_{SENSE}	Sense Voltage(Bin2)	$V_{SENSE1} - V_{SENSE2}$	95	100	105	mV
V_{SENSE}	Sense Voltage(Bin3)	$V_{SENSE1} - V_{SENSE2}$	85	100	115	mV
T_{SD}	Thermal shutdown Temp		-	140	-	$^{\circ}C$
T_{SH}	Thermal Shutdown Hysteresis		-	30	-	$^{\circ}C$



Applications

CV/CC Loop Regulation

As seen in Functional Block Diagram, the SE2490 is a peak current mode pulse width modulation (PWM) converter with CC and CV control. The converter operates as follows:

A switching cycle starts when the rising edge of the Oscillator clock output causes the High-Side Power Switch to turn on. With the LX side of the inductor now connected to Sense1, the inductor current ramps up to store energy in the magnetic field. The inductor current level is measured by the Current Sense Amplifier and added to the Oscillator ramp signal. If the resulting summation is higher than the COMP voltage, the output of the PWM Comparator goes high. When this happens or when Oscillator clock output goes low, the High-Side Power Switch turns off.

At this point, the LX side of the inductor swings to a diode voltage below ground, causing the inductor current to decrease and magnetic energy to be transferred to output. This state continues until the cycle starts again. The High-Side Power Switch is driven by logic using BS as the positive rail. This pin is charged to $V_{LX} + 5V$ when the Low-Side Power Switch turns on. The COMP voltage is the integration of the error between FB input and the internal 1V reference. If FB is lower than the reference voltage, COMP tends to go higher to increase current to the output. Output current will increase until it reaches the CC limit set by the R1 resistor. At this point, the device will transition from regulating output voltage to regulating output current, and the output voltage will drop within creasing load.

Current Limit Protection

The Current limit is set by outside resistance (R_{SENSE}). When the SENSE1-SENSE2 voltage larger than 100mV, the current limit is happened that driver can be turned off. The current limit set according to the following equation:


$$\text{Current Limit (A)} = \frac{100\text{mV}}{R_{SENSE}}$$

Output Over-Voltage protection

The SE2490 provides output over-voltage protection function. When output over-voltage happens ($V_{SENS2} > 5.8V$), the SE2490 shuts down. When output over-voltage is released ($V_{SENS2} < 5.7V$), the SE2490 recovers to normal state automatically.

Output Short-Circuit protection

The SE2490 provides output short-circuit protection function. When V_{OUT} is short ($V_{FB} < 0.4V$), the auto restart function can be started that restart the regulator cycle by cycle. The cycle time is set by internal counter.

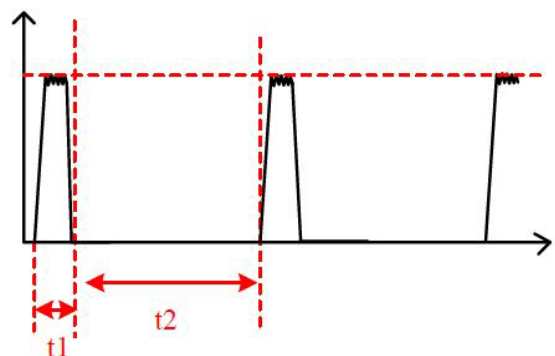

$$t1 = 3\text{m(Sec)}$$

$$t2 = 90\text{m(Sec)}$$



Thermal Shutdown

The SE2490 disables switching when its junction temperature exceeds 140°C and resumes when the temperature has dropped by 30°C.

Output Voltage Setting

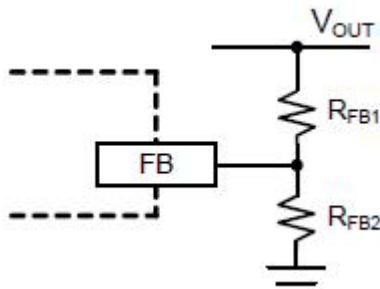


Figure1 Output Voltage Setting

Figure 1 shows the connections for setting the output voltage. Select the proper ratio of the two feedback resistors RFB1 and RFB2 based on the output voltage. Typically, use RFB2 10kΩ and determine RFB1 from the following equation:

$$R_{FB1} = R_{FB2} \left(\frac{V_{OUT}}{1V} - 1 \right)$$

Inductor Selection

The inductor maintains a continuous current to the output load. This inductor current has a ripple that is dependent on the inductance value:

Higher inductance reduces the peak-to-peak ripple current. The trade off for high inductance value is the increase in inductor core size and series resistance, and the reduction in current handling capability. In general, select an inductance value L based on ripple current requirement:

$$L = \frac{V_{OUT} \times (V_{IN} - V_{OUT})}{V_{IN} f_{LX} I_{OUTMAX} K_{RIPPLE}}$$

Where VIN is the input voltage, VOUT is the output voltage, fLX is the switching frequency, IOUTMAX is the maximum output current, and KRIPPLE is the ripple factor. Typically, choose KRIPPLE = 30%

to correspond to the peak-to-peak ripple current being 30% of the maximum output current.

With this inductor value, the peak inductor current is IOUT × (1 + KRIPPLE/2). Make sure that this peak inductor current is less than the controller’s current limit. Finally, select the inductor core size so that it does not saturate at the peak inductor current.

Input Capacitor

The input capacitor needs to be carefully selected to maintain sufficiently low ripple at the supply input of the converter. A low ESR capacitor is highly recommended. Since large current flows in and out of this capacitor during switching, its ESR also affects efficiency.

The input capacitance needs to be higher than 100µF. The best choice is the ceramic type, however, low ESR tantalum or electrolytic types may also be used provided that the RMS ripple current rating is higher than 50% of the output current. The input capacitor should be placed close to the IN and G pins of the IC, with the shortest traces possible. In the case of tantalum or electrolytic types, they can be further away if a small parallel 0.1µF ceramic capacitor is placed right next to the IC. Especially C8 capacitor should be placed as close as possible to the IC pin.

Output Capacitor

The output capacitor also needs to have low ESR to keep low output voltage ripple. The output ripple voltage is:

$$V_{RIPPLE} = I_{OUTMAX} K_{RIPPLE} R_{ESR} + \frac{V_{IN}}{28 \times f_{LX}^2 LC_{OUT}}$$



Where I_{OUTMAX} is the maximum output current, KRIPPLE is the ripple factor, R_{ESR} is the ESR of the output capacitor, f_{LX} is the switching frequency, L is the inductor value, and C_{OUT} is the output capacitance. In the case of ceramic output capacitors, R_{ESR} is very small and does not contribute to the ripple. Therefore, a lower capacitance value can be used for ceramic type. In the case of tantalum or electrolytic capacitors, the ripple is dominated by RESR multiplied by the ripple current. In that case, the output capacitor is chosen to have sufficiently low ESR.

For ceramic output capacitor, typically choose a capacitance of about 470µF. For tantalum or electrolytic capacitors, choose a capacitor with less than 50mΩ ESR.

Rectifier Diode

Use a Schottky diode as the rectifier to conduct current when the High-Side Power Switch is off.

The Schottky diode must have current rating higher than the maximum output current and a reverse voltage rating higher than the maximum input voltage.

Output Cable Resistance Compensation

To compensate for resistive voltage drop across the charger's output cable, the SE2490 integrates a simple, user-programmable cable voltage drop compensation using the impedance at the FB pin. Use the curve in Figure 2 to choose the proper feedback resistance values for cable compensation. R_{FB1} is the high side resistor of voltage divider.

$$V_{OUT} = [(1 + \frac{R_{FB1}}{R_{FB2}}) \times V_{FB}] + R_{FB1} \times I_{FB}$$







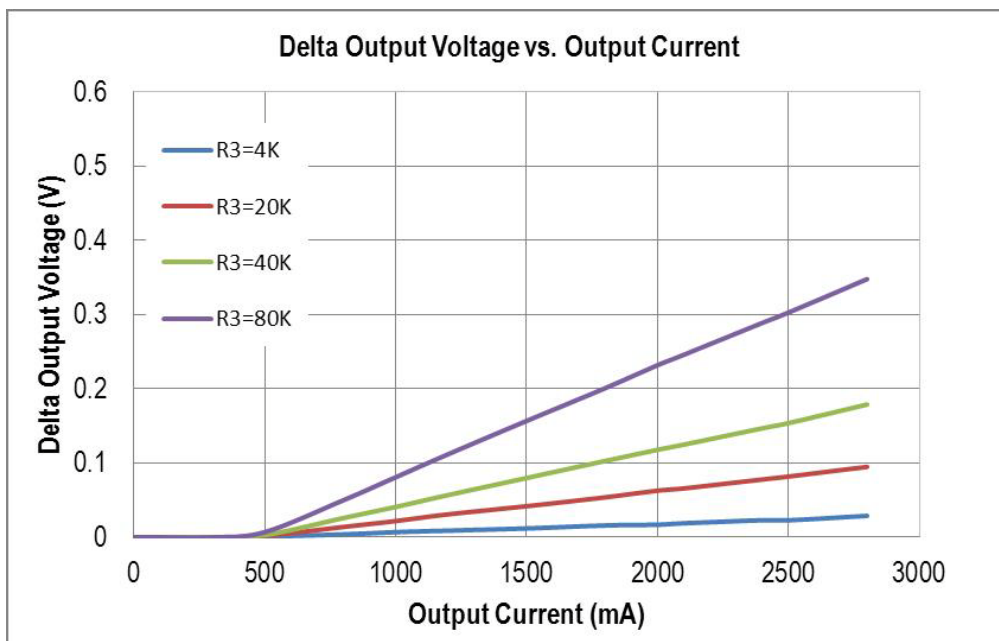


Figure2 Cable Compensation at Various Resistor Divider Values

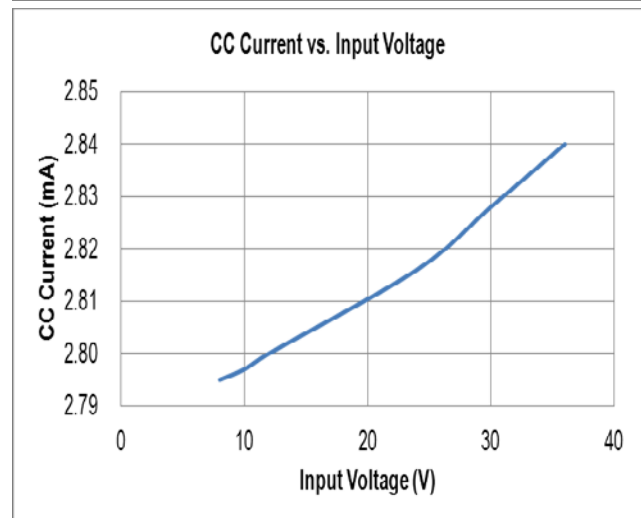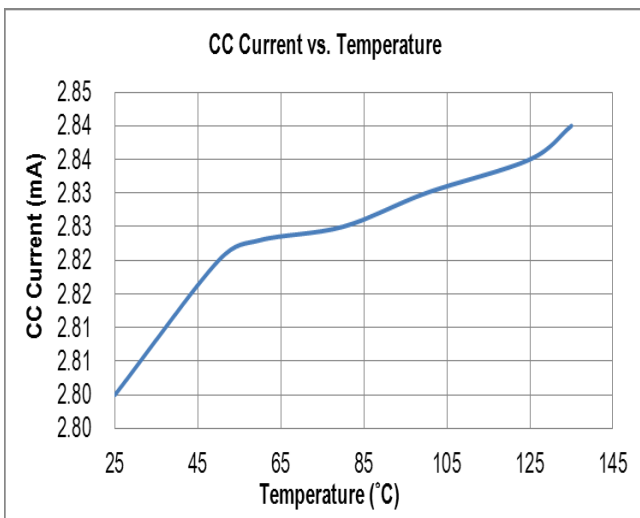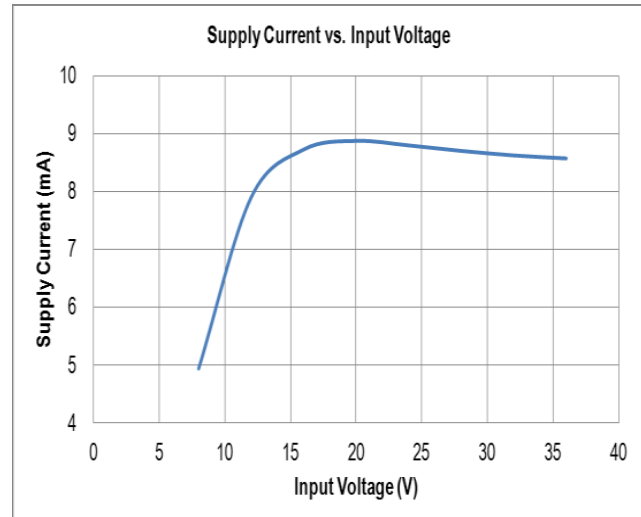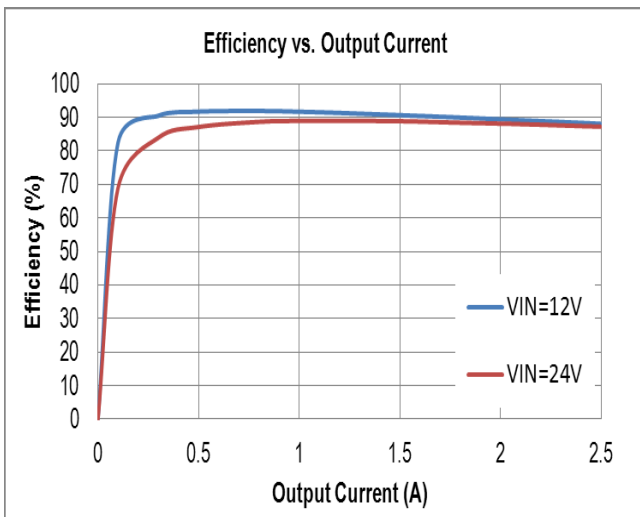


Typical Performance Characteristics (Continues)

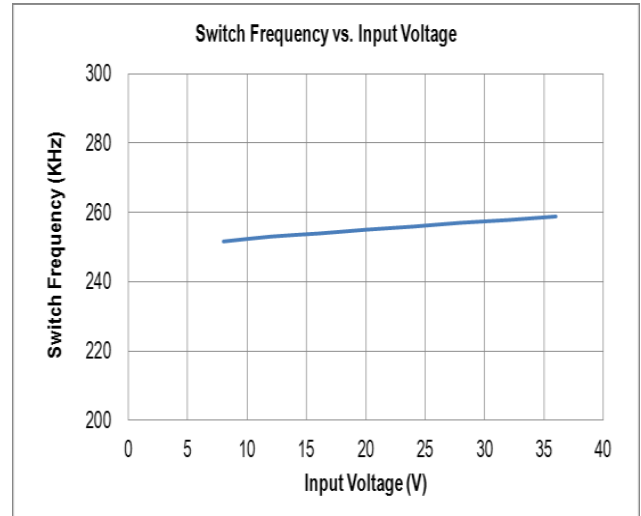

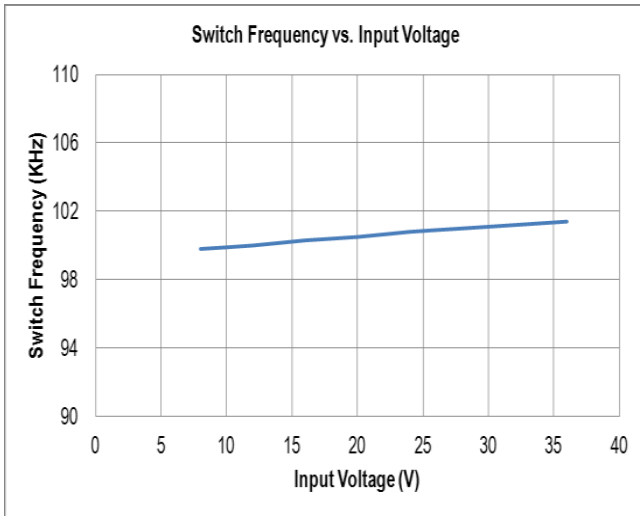


Typical Performance Characteristics (Continues)


Start up into CC mode
 $V_{IN}=12V, V_{OUT}=5V, I_{OUT}=2.8A$

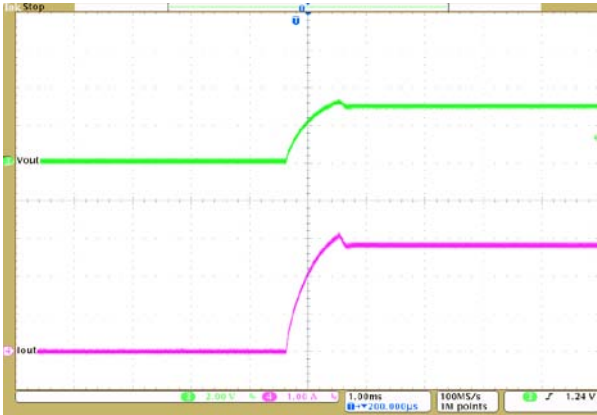


Start up into CC mode
 $V_{IN}=24V, V_{OUT}=5V, I_{OUT}=2.8A$

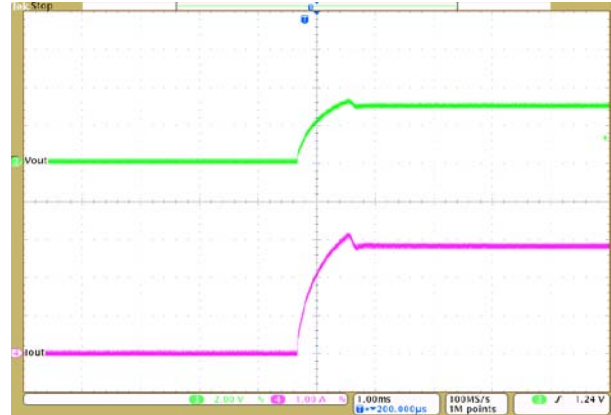


Transient Response (Rising Time)
 $V_{IN}=12V, V_{OUT}=5V, I_{OUT}=0.01A\sim 2.8A$

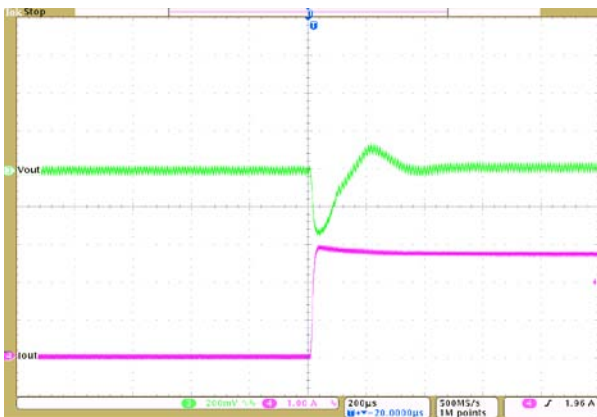


Transient Response (Falling Time)
 $V_{IN}=12V, V_{OUT}=5V, I_{OUT}=0.01A\sim 2.8A$

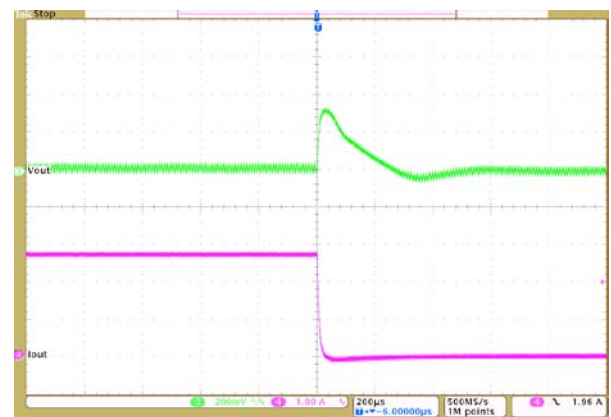

Transient Response (Rising Time)
 $V_{IN}=24V, V_{OUT}=5V, I_{OUT}=0.01A\sim 2.8A$

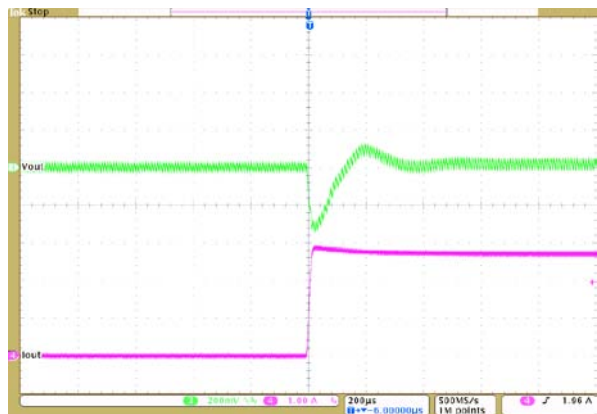


Transient Response (Falling Time)
 $V_{IN}=24V, V_{OUT}=5V, I_{OUT}=0.01A\sim 2.8A$

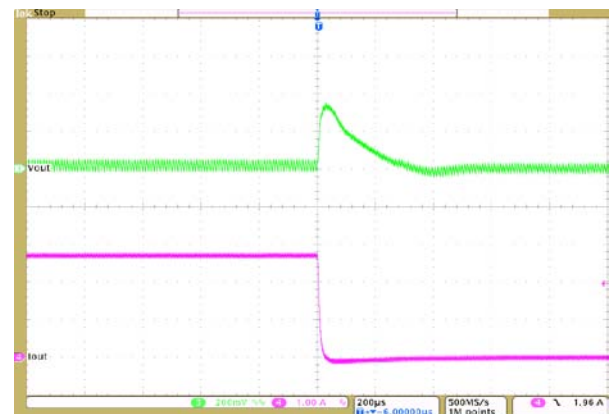




Typical Performance Characteristics (Continues)


Short Circuit
 $V_{IN}=12V, V_{OUT}=5V$

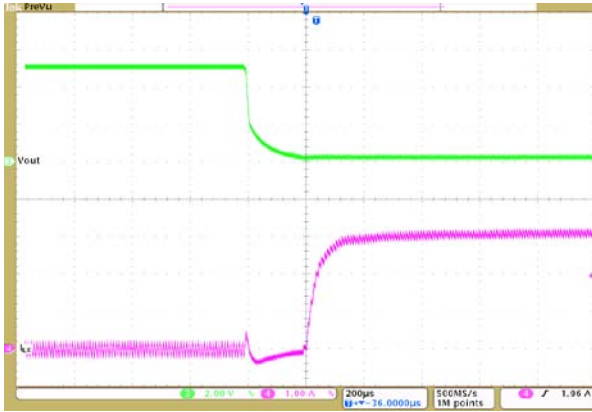


Short Circuit
 $V_{IN}=24V, V_{OUT}=5V$

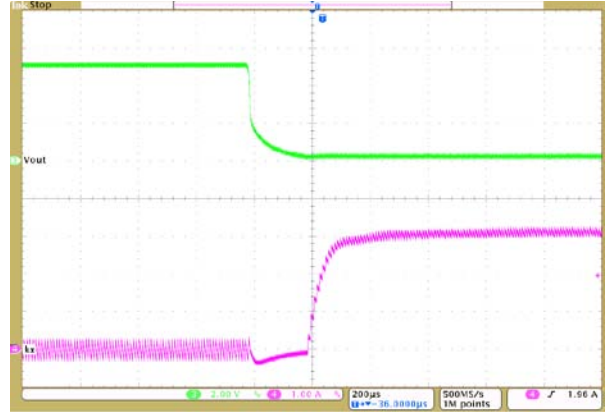

Output Voltage Ripple
 $V_{IN}=12V, V_{OUT}=5V, I_{OUT}=2.8A$

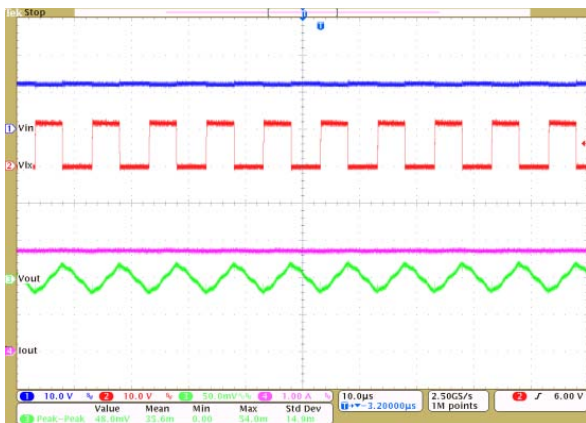


Output Voltage Ripple
 $V_{IN}=24V, V_{OUT}=5V, I_{OUT}=2.8A$

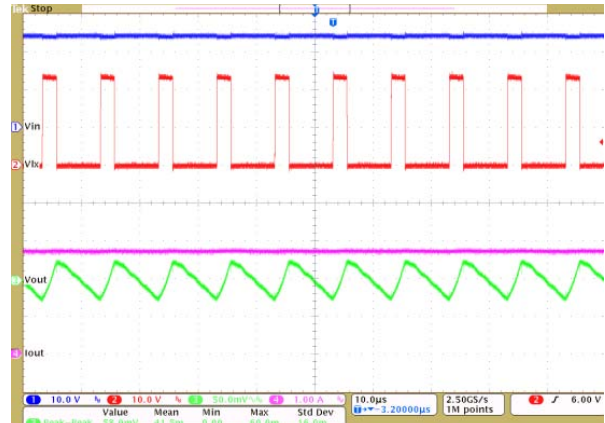



Outline Drawing For PSOP8

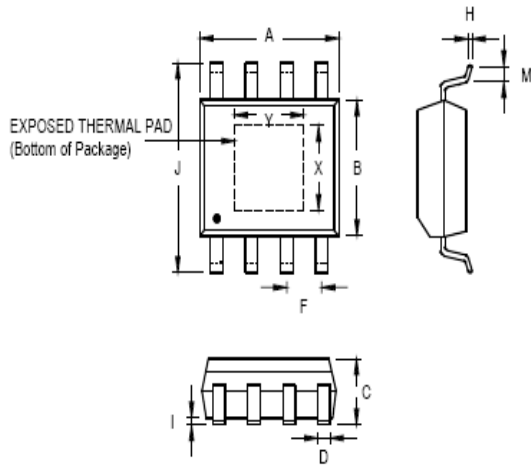

Symbol	Dimensions In Millimeters		Dimensions In Inches	
	Min	Max	Min	Max
A	4.801	5.004	0.189	0.197
B	3.810	3.988	0.150	0.157
C	1.346	1.753	0.053	0.069
D	0.330	0.508	0.013	0.020
F	1.194	1.346	0.047	0.053
H	0.191	0.254	0.008	0.010
I	0.000	0.152	0.000	0.006
J	5.791	6.198	0.228	0.244
M	0.406	1.270	0.016	0.050
X	2.057	2.515	0.081	0.099
Y	2.057	3.404	0.081	0.134

Customer Support

Seaward Electronics Incorporated – China

Section B, 2nd Floor, ShangDi Scientific Office Complex, #22 XinXi Road
Haidian District, Beijing 100085, China
Tel: 86-10-8289-5700/01/05
Fax: 86-10-8289-5706

Seaward Electronics Corporation – Taiwan

2F, #181, Sec. 3, Minguan East Rd,
Taipei, Taiwan R.O.C
Tel: 886-2-2712-0307
Fax: 886-2-2712-0191

Seaward Electronics Incorporated – North America

1512 Centre Pointe Dr.
Milpitas, CA95035, USA
Tel: 1-408-821-6600